





Remove Nuts From Vertical Column Studs

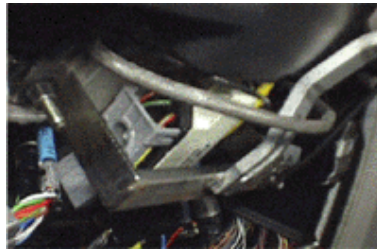

Attach Bracket and Hoop



Secure Nuts

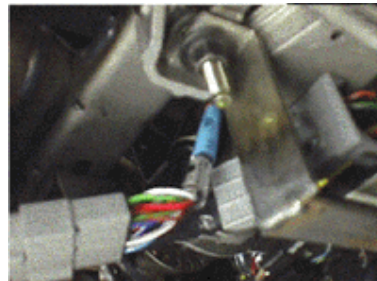

Attach Main Arm Run Cable Casing Around Thru Dash and by Stud on Right Side of Bracket. Attach to Accelerator Cable. See Page 8 Fig.9 of Instructions



Attach "P" Clamp to Stud and Tighten Per Page 9, Step 10 in Instruction Manual.



Reinstall Knee Bolster and Plastic Panel.
Cut Small Notch for Cable. Attach Brake
Tube and Bracket



Operate Brake Making Sure Cable
Casing Doesn't Rub Against Anything
Sharp



Adjust Jam Nuts on Threaded Rod Making
the Main Arm as High as Possible Without
Putting the Brake Lights on. Consult
Instruction Manual for Additional Help

